

# WINTERIZE T@B 400 (2020)

22.



- Unscrew the white intake hose from the water pump and place it in a bucket.
- Fill a bucket with antifreeze.

23.



- Fully open bathroom sink **COLD**-water faucet.
- Turn water pump on until pink antifreeze is visibly running from faucet.
- Turn off water pump.
- Check that antifreeze is still in blue bowl (see above).

24.




- Fully open bathroom sink **HOT**-water faucet.
- Turn water pump on until pink antifreeze is visibly running from faucet.
- Turn off water pump.
- Check that antifreeze is still in blue bowl (see above).

25.



- Fully open indoor shower **COLD**-water faucet.
- Turn water pump on until pink antifreeze is visibly running from faucet.
- Turn off water pump.
- Check that antifreeze is still in blue bowl (see above).

26.

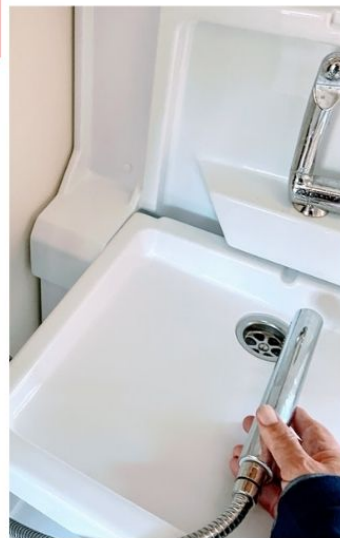

- Fully open indoor shower **HOT**-water faucet.
- Turn water pump on until pink antifreeze is visibly running from faucet.
- Turn off water pump.
- Check that antifreeze is still in blue bowl (see above).